

Bruksanvisning FAGOR vaskemaskin

1) Fyll maskinen

 





2) Velg program

- P1** :Intensiv forvask 40° / hovedvask 90°
- P2** :Intensiv forvask 30° / hovedvask 60°
- P3** :Intensiv forvask kald / hovedvask 30°
- P4** :Intensivprogram kald
- P5** : Normalprogram forvask 30° / hovedvask 60°
- P6** : Normalprogram forvask kald / hovedvask 30°
- P7** : Normalprogram kald
- P8** : Skåneprogram forvask kald / hovedvask 40°
- P9** : Skåneprogram kald
- P10** : Håndvask kald
- P11** : Økonomiprogram forvask 40° / hovedvask 90°
- P12** : Økonomiprogram forvask 30° / hovedvask 60°
- P13** : Økonomiprogram forvask kald / hovedvask 30°
- P14** : Økonomiprogram kald
- P15** : Ekstra skittent
- P16** : Lang sentrifugering
- P17** : Kort sentrifugering

3) Dosering av kjemikalier / såpe



-  Såpe til forvask
-  Såpe til hovedvask
-  Skyllmiddel
-  Blekemiddel

4) START START PROGRAMMET



Start



Neste program



Forrige program