






Press  to return to the start-up screen, or press  to return to the initial screen and confirm the changes.

1. OPL CONFIGURATION MENU



With the washing machine switched on and without running any programmes, press  and  and the configuration screen is displayed.

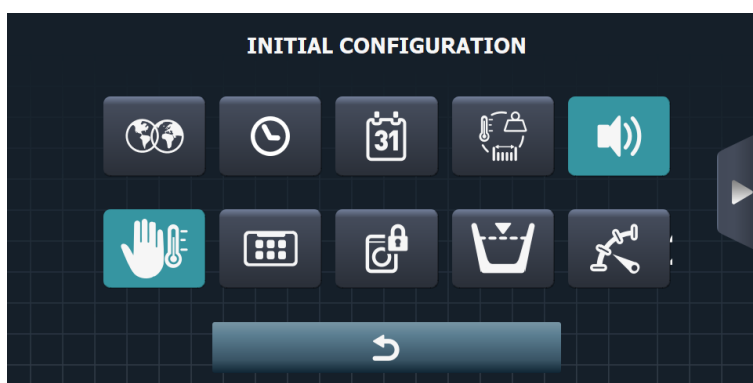




1.1 Language

On the initial configuration screen select the icon , and go to the language selection menu.

The washing machine texts can be displayed in 33 different languages, although the texts can only be edited using Western character sets.

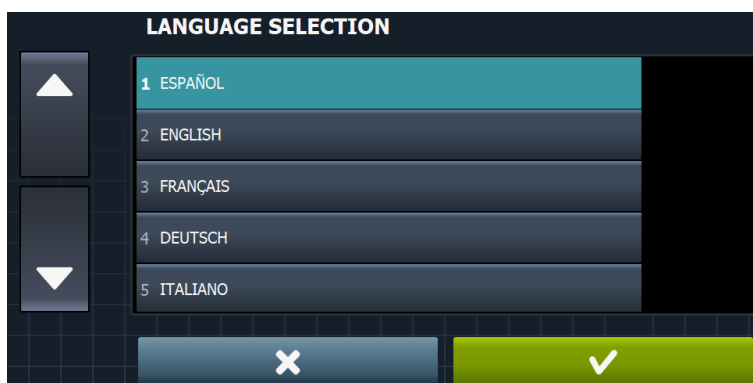Use the  and  keys to scroll through the menu, go from one language to the next.



Press  to return to the initial configuration screen, or press  to return to the initial configuration screen and confirm the changes.

The following languages are available:

- SPANISH → ESPAÑOL
- ENGLISH → ENGLISH (default)
- FRENCH → FRANÇAIS
- GERMAN → DEUTSCH
- ITALIAN → ITALIANO
- PORTUGUESE → PORTUGUÊS
- POLISH → POLSKI
- TURKISH → TÜRKÇE
- CZECH → ČEŠTINA
- EUSKARA → EUSKARA
- CATALAN → CATALÀ
- GALICIAN → GALEGO
- VALENCIAN → VALENCIÀ
- SWEDISH → SVENSKA
- DUTCH → NEDERLANDS
- HUNGARIAN → MAGYAR
- FINNISH → SUOMI
- ESTONIAN → EESTI
- NORWEIGAN → NORSK
- SLOVENE → SLOVENŠČINA
- SLOVAK → SLOVENČINA
- CROATIAN → HRVATSKI
- LITHUANIAN → LIETUVIŲ
- ROMANIAN → ROMÂNĂ
- GREEK → ΕΛΛΗΝΙΚΑ
- RUSSIAN → РУССКИЙ
- BULGARIAN → БЪЛГАРСКИ ЕЗИК